




Installation Instructions Blade Replacement Kit

Important:

*Before beginning, note the orientation of the blade. You will need to install the new blade in the same orientation as the old one (**Note:** Blade angle must be facing the same direction).*

1. Remove the c-clip by sliding it off the motor shaft. Use a small screwdriver or needle nose pliers. If there is a shim washer, remove this also (the shim will be replaced with the new blade). **See Detail A**
2. Remove the old blade and replace it with the new blade. Make sure the slot in the blade hub is aligned with the drive pin on the motor shaft. **See Detail B**
3. Replace the shim washer and slide the new c-clip over the shim with the cupped side facing down. The clip will “snap” into place.

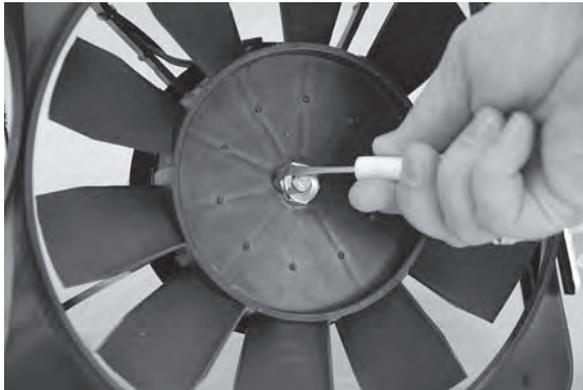

Detail A



Detail B

The Flex-a-lite Limited Warranty

Flex-a-lite Consolidated, 7213-45th St. Ct. E. Fife, WA 98424, Telephone No. 253-922-2700, warrants to the original purchasing user, that all Flex-a-lite products to be free of defects in material and workmanship for a period of 365 days (**1 year**) from date of purchase. Flex-a-lite products failing within 365 days (**1 year**) from date of purchase may be returned to the factory through the point of purchase, transportation charges prepaid. If, on inspection, cause of failure is determined to be defective material or workmanship and not by misuse, accidental or improper installation, Flex-a-lite will replace the product free of charge, transportation prepaid. **Flex-a-lite will not be liable for incidental, progressive or consequential damages.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. The Flex-a-lite warranty is in compliance with the Magnuson-Moss Warranty Act of 1975.