



Radiator Overflow Tank

#32013 (20oz.) & #32017 (26oz.)

Installation Instructions

Note: Please read instructions carefully and completely before assembly.

1. Verify that all kit components are present. *See Below.*

#32013 (20oz.)

- Tank, Polished 20oz.
- Bracket 51107 x 1
- T-Stud x 2
- Lock Nut x 2
- Washer x 2
- Small Parts Bag x 1

#32017 (26oz.)

- Tank, Polished 26oz.
- Bracket 51108 x 1
- T-Stud x 2
- Lock Nut x 2
- Washer x 2
- Small Parts Bag x 1

2. Choose a mounting position for the overflow tank. Be sure that there is enough room to connect a hose(s) to the bottom of the tank without interference from any other components. It is recommended to use the side tank of your **Flex-a-fit** radiator to mount the overflow tank. *(If room is not available, there is a small parts kit for remote mounting.)*

3. Slide the T-studs into the rail of the radiator tank. *(see detail 1)*



Detail 1

4. Place the bracket onto the T-studs and tighten the bracket into place with the lock nuts provided in the kit. *(see detail 2)*

5. Position the tank on the bracket as shown in *detail 3* and fasten together with the small bolts and lock washers from the small parts bag included with the kit. *(see detail 3)*


6. As soon as the tank is mounted securely to the bracket, you can loosen the lock nuts of the T-studs just enough to slide the tank up and down the side tank to locate in the desired position. *Note: for maximum capacity of the overflow tank, mount the tank so as NOT to be above the top of the radiator. (see detail 4)*



Detail 2

Note: This kit does NOT include 1/4" hose or hose clamps necessary to complete the installation. Hose can also be connected to the long vent tube of the overflow tank to direct coolant away from the engine compartment in case of a "boil-over".

7. Connect 1/4" coolant hose from the radiator to the overflow tank using the SHORT metal tube on the bottom of the overflow tank. Be careful not to plug the LONG metal tube. This is used as an air vent to the tank. Secure the hose in place so as not to disconnect during use.

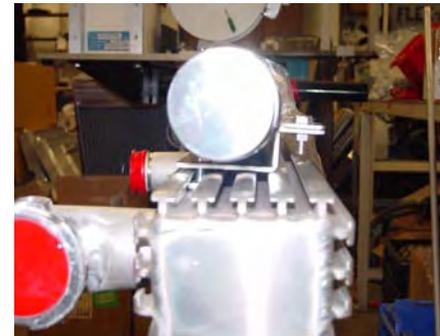

Detail 3



Detail 4

The Flex-a-lite Limited Warranty

Flex-a-lite Consolidated, 7213-45th St. Ct. E., Fife, WA. 98424, Telephone No. 253-922-2700, warrants to the original purchasing user, that all Flex-a-lite products to be free of defects in material and workmanship for a period of 365 days (1 year) from date of purchase. Flex-a-lite products failing within 365 days (1 year) from date of purchase may be returned to the factory through the point of purchase, transportation charges prepaid. If, on inspection, cause of failure is determined to be defective material or workmanship and not by misuse, accidental or improper installation, Flex-a-lite will replace the product free of charge, transportation prepaid. **Flex-a-lite will not be liable for incidental, progressive or consequential damages.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. The Flex-a-lite warranty is in compliance with the Magnuson-Moss Warranty Act of 1975.