



Radiator Accessory



Bracket Kit #32122

#32125

Assembly Instructions

NOTE: It is easiest to install the accessory brackets on the radiator before the radiator is installed in the vehicle, with the radiator lying flat!

1. Find four ¼ -20 stud mounting fasteners. Slide two fasteners in the channel furthest out toward the edge on the left radiator side tank. Repeat on the right side tank.
2. Install one end bracket, #51079, over each mounting stud, with the tab offset down toward the radiator core. Place a washer over each bracket. Thread on a locknut, but do not tighten yet.
3. Line up the top left and right brackets and bottom left and right brackets so they are straight across from each other.
4. Slide a mounting stud up through the slotted end of each of the four end brackets (see exploded view below). Find a long U-bracket. While supporting the mounting stud with your finger from underneath, place the U-bracket over the tab and mounting stud so that the stud goes through the long slot on the U-bracket. Follow this procedure for the other 3 end brackets.
5. Place a washer over each stud and thread on a locknut, but do not tighten yet.
6. Determine the size of the accessory you're mounting (oil cooler, auxiliary fan, etc.). Position the accessory brackets so that they will support your accessories. If possible, position accessories so that they are roughly centered over the radiator core area.
7. When the brackets are placed, tighten all locknuts. **NOTE: Torque locknuts to 10 ft.-lbs. to avoid damaging the stud mounting fasteners!**

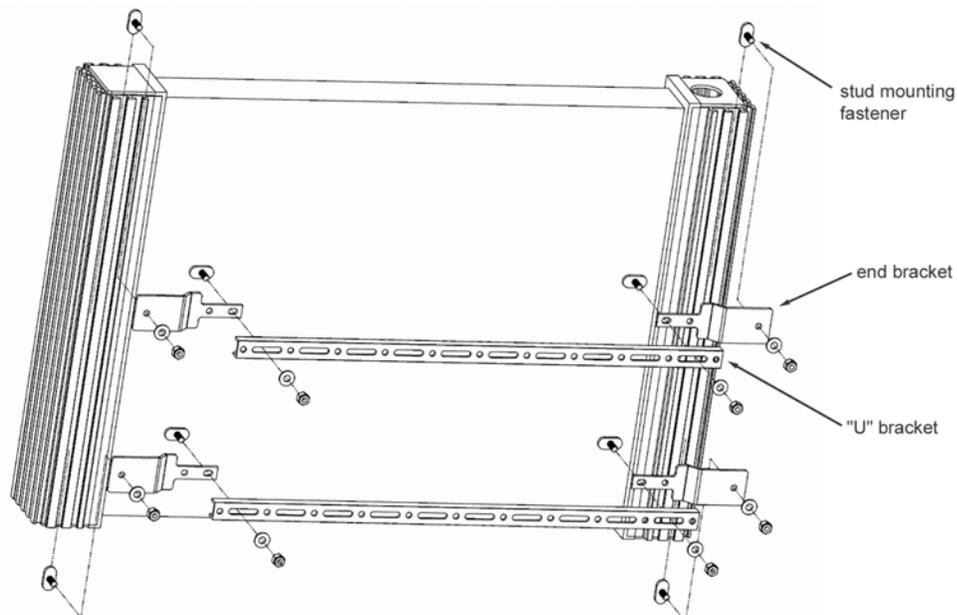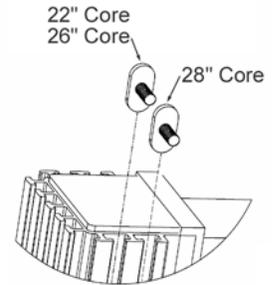

The Flex-a-lite Limited Warranty

Flex-a-lite Consolidated, 7213-45th St. Ct. E. Fife, WA 98424, Telephone No. 253-922-2700, warrants to the original purchasing user, that all Flex-a-lite products to be free of defects in material and workmanship for a period of 365 days (1 year) from date of purchase. Flex-a-lite products failing within 365 days (1 year) from date of purchase may be returned to the factory through the point of purchase, transportation charges prepaid. If, on inspection, cause of failure is determined to be defective material or workmanship and not by misuse, accidental or improper installation, Flex-a-lite will replace the fan free of charge, transportation prepaid. **Flex-a-lite will not be liable for incidental, progressive or consequential damages.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. The Flex-a-lite warranty is in compliance with the Magnuson-Moss Warranty Act of 1975.

99883 07-27-05