



# Silver Bullet

Throttle Body Spacer

PN 46-35003

## Important!

Please verify the parts list and read all instruction steps before you begin installation.

Make	Model	Year	Engine
Jeep	Wrangler (JK)	2012-2014	V6-3.6L

**Step 1.** A) Remove the engine cover.

B) Loosen the clamps on the intake tube using an 8mm nut driver. Unbolt the two 10mm screws on the intake tube (they) are located at the front of the tube. Unclip the temperature sensor connector and then fully remove the OE intake tube.

**Step 2.** A) Unbolt the throttle body using an 8mm socket and ratchet. Save the screws for future use.


**Step 3.** A) Insert the **Silver Bullet** throttle body spacer and gasket between the intake manifold and the throttle body (the gasket goes between the spacer and the throttle body).

B) Fasten the throttle body assembly using the (4) factory screws. Tighten the screws to 10 Nm (89 lb/in).

**Step 4.** A) Reinstall the intake tube and connect the temperature sensor. Tighten all bolts and clamps.

B) Reinstall the engine cover.

**Your install is now complete!** Make sure to retighten all bolts and clamps after 100 miles of driving.

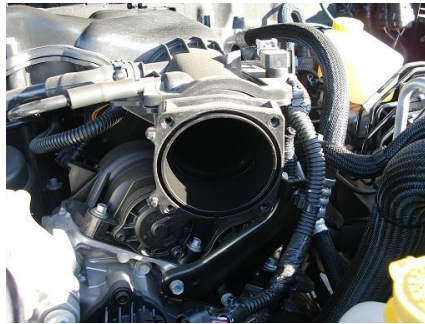

### Parts List

1 **Silver Bullet** Spacer

1 Gasket

**advanced FLOW engineering**

252 Granite Street, Corona, CA 92879

Support: 951-493-7100

www.aFePower.com