


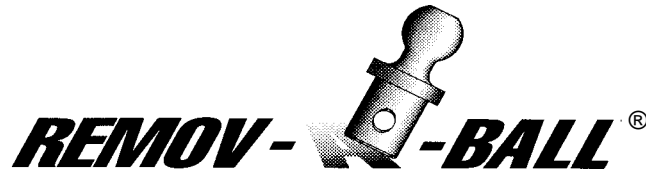

# 6308

## U-BOLT SAFETY CHAIN KIT



# INSTALLATION INSTRUCTIONS

READ THOROUGHLY BEFORE BEGINNING

## REPLACEMENT U-BOLT SAFETY CHAIN KIT

### IMPORTANT

This product is intended to be used with Draw-Tite manufactured 2 5/16" *Remov-A-Ball*® Gooseneck Hitch Part Number 6300.

If Draw-Tite manufactured *Remov-A-Ball*® Gooseneck Hitch is not used, **THIS PRODUCT BECOMES A GENERAL APPLICATION PRODUCT. IT IS THE RESPONSIBILITY OF THE INSTALLER TO SELECT STRUCTURALLY SAFE MATERIALS AND LOCATIONS FOR ATTACHMENT. INSTALLATION INFORMATION FOLLOWS.**

### TOOLS REQUIRED:

- Socket and/or wrench 15/16
- Drill - 11/16" Dia.

5/8" U-BOLT 5 1/2" LENGTH - 2 PLACES

LARGE FLAT WASHER - 8 PLACES


5/8" - 18 LOCKING JAM NUT - 4 PLACES

3 VISIBLE FULL BOLT THREADS REQUIRED

GOOSENECK HITCH PLATFORM (NOT PROVIDED)

UNDER VEHICLE SUPPORT (NOT PROVIDED)

SPRING - 4 PLACES

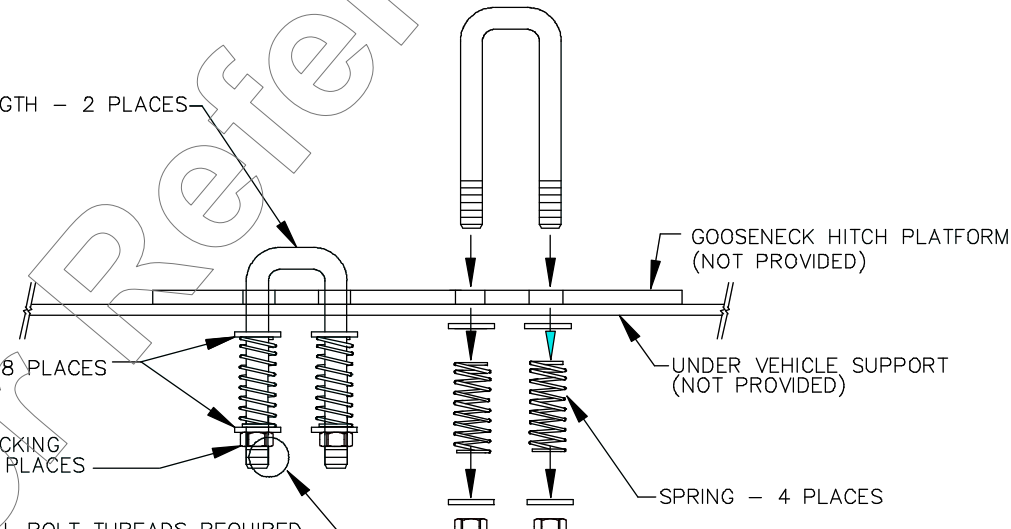

**NOTE:** CHECK U-BOLTS FREQUENTLY, MAKING SURE ALL FASTENERS ARE PROPERLY TIGHTENED. A U-BOLT OR FASTENER WHICH HAS BEEN DAMAGED SHOULD BE REMOVED AND REPLACED. OBSERVE SAFETY PRECAUTIONS WHEN WORKING BENEATH A VEHICLE AND WEAR EYE PROTECTION. FOLLOW VEHICLE MANUFACTURER'S SPECIFICATIONS FOR MAXIMUM TRAILER WEIGHT. DO NOT CUT ACCESS OR ATTACHMENT HOLES WITH A TORCH.