



G.T. Styling

DEFLECTOR MOUNTING INSTRUCTIONS:

The deflector will have either an (A), (B), or (C) marked on the mounting flange. This indicates the "type" of mounting for the deflector.
PLEASE READ THE CORRESPONDING INSTRUCTION FOR THE MOUNTING TYPE NOTED ON THE DEFLECTOR.

MOUNTING TYPES:

All "No-Holes-To-Drill" deflectors attach to the top of the hood with dual-lok mounting tabs - the differences occur under the hood.

The 3-Mounting Types are:

TYPE "A": Uses mounting clips at pre-drilled hole locations on the deflector mounting flange.

TYPE "B": Fits flush with under-hood-contours and uses no mounting hardware.

TYPE "C": Attaches under hood with dual-lok mounting strips.

PRE-MOUNTING: ALL MOUNTING TYPES

1. Clean top of hood with warm, soapy water. Rinse and dry with clean cloth.
2. Measure across underside of hood with tape measure and mark center of hood with masking tape.
3. Slide deflector onto hood and line up centering notch on deflector mounting flange with tape mark on underside of hood. Tape deflector to hood to hold in place.
4. Gently close hood and check clearance between ends of deflector and fenders/edges of hood. Reposition deflector if interference with vehicle occurs, then retape deflector to hood.

MOUNTING:

TYPE "A": CLIP MOUNTING

1. Slide mounting clips over deflector mounting flange and hood stiffener flange at pre-drilled hole locations in deflector mounting flange. Close hood. **NOTE: SOME MOUNTING FLANGES USE LESS THAN 4-CLIPS.**
2. Pull top lip of deflector forward and use alcohol wipes to clean top of hood at dual-lok mounting tab locations. Dry with clean cloth.
3. Remove tape backing from dual-lok and press firmly in place on hood. Allow tape to cure 24 hrs. before removing deflector.
4. To remove clips, relieve spring pressure with coin and slide clips off.

TYPE "B": FLUSH CONTOURED MOUNTING FLANGE:

1. Press mounting flange firmly against underside of hood and maintain pressure.
2. Pull top lip of deflector forward and use alcohol wipes to clean top of hood at dual-lok mounting tab locations. Dry with clean cloth.
3. Remove tape backing from dual-lok and press firmly in place on hood. Allow tape to cure 24 hrs. before removing deflector.

TYPE "C": DUAL-LOK STRIPS ON MOUNTING FLANGE:

1. Clean underside of hood with warm, soapy water. Rinse and dry with clean cloth.
2. Note dual-lok mounting strip locations on underside of hood, remove deflector and clean mounting locations with alcohol wipe. Dry with clean cloth.
3. Reposition deflector on hood, remove tape backing from dual-lok strips on mounting flange and press firmly in place to seat tape. Close hood.
4. Pull top lip of deflector forward and use alcohol wipe to clean top of hood at dual-lok mounting tab locations. Dry with clean cloth.
5. Remove tape backing from dual-lok and press firmly in place on hood. Allow all mounting tape to cure 24 hrs. before removing deflector.


OPTIONAL SCREW MOUNTING

All 3-mounting types have pre-drilled holes in the mounting flange for optional screw mounting. To utilize screw mounting hold deflector in place on hood and drill 1/8" diameter holes in underside of hood at pre-drilled hole locations on deflector mounting flange. Attach deflector with provided screws and washers.

CAUTION: DO NOT DRILL ADDITIONAL HOLES IN MOUNTING FLANGE. DO NOT DRILL THRU TOP OF HOOD!


TYPE "A": CLIP MOUNTING

CUT-AWAY VIEW OF MOUNTED DEFLECTOR

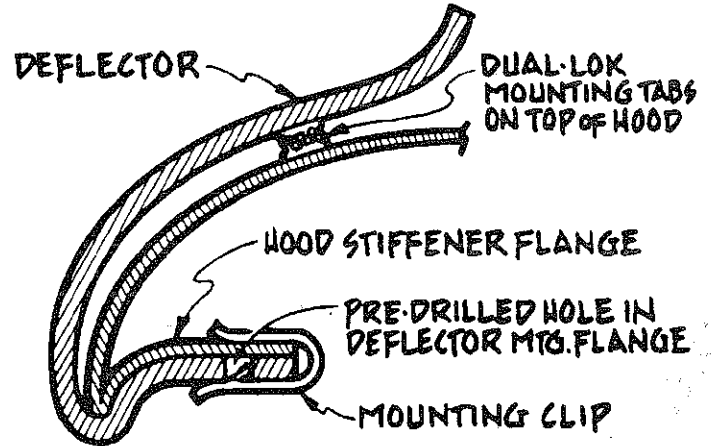


TYPE "B": FLUSH CONTOURED MOUNTING FLANGE

CUT-AWAY VIEW OF MOUNTED DEFLECTOR

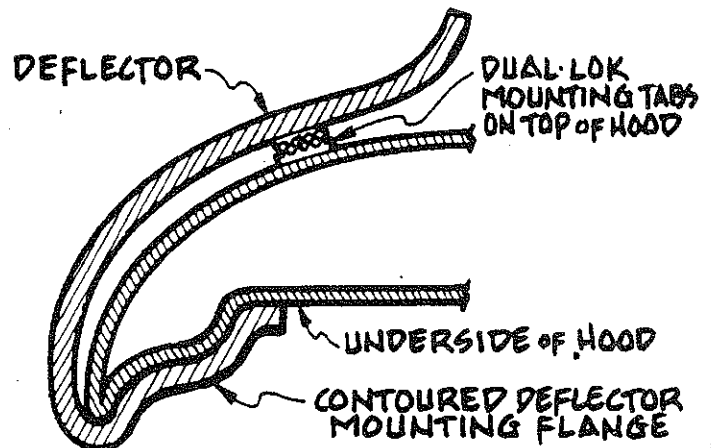

TYPE "C": DUAL-LOK STRIPS ON MOUNTING FLANGE

CUT-AWAY VIEW OF MOUNTED DEFLECTOR

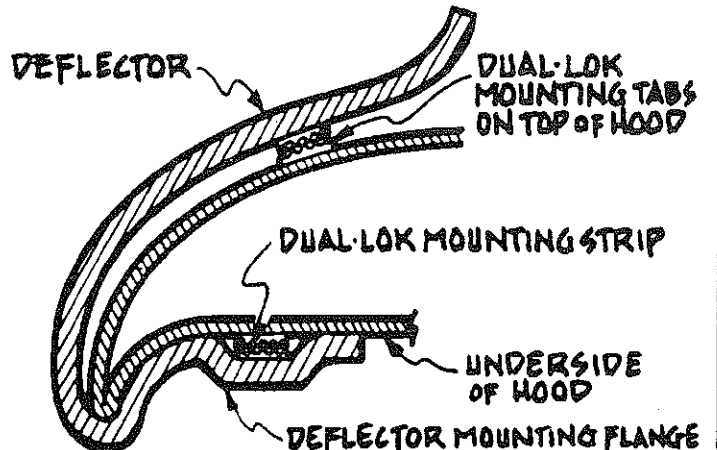

G.T. STYLING • Consumer Warranty Claims • (714) 630-6661

LIMITED LIFETIME WARRANTY: All components of this product have a LIMITED LIFETIME WARRANTY from date of purchase to be free of manufacturer's defects in material and craftsmanship. Damage due to improper installation or road hazards is not covered. Manufacturer's obligation shall be to replace the product proved to be defective. Proof of purchase is necessary for the replacement of any warrantable G.T. Styling™ product.