


INSTRUCTIONS FOR # 7-1604 TRANSMISSION MOUNT

- 1) URETHANE MOUNT WILL FIT BOTH ONE OR TWO STUD TYPE OF MOUNT TO CROSSMEMBER APPLICATIONS. DETERMINE WHICH TYPE IS ON VEHICLE. INSTALL THE SUPPLIED STUDS (7/16" X 1 1/2") INTO THE APPROPRIATE HOLES BY "DOUBLE NUTTING" THE END OF A STUD, THEN SCREW IN AND FIRMLY SEAT IN PLACE. INSTALL URETHANE MOUNT.
- 2) INSTALL (MOUNT TO CROSSMEMBER) FLAT WASHERS, LOCK WASHERS AND NUTS SUPPLIED IN THIS KIT, AS SHOWN IN DIAGRAM BELOW. DO NOT TIGHTEN NUTS AT THIS TIME.
- 3) INSTALL, BUT DO NOT TIGHTEN THE MOUNT TO TRANSMISSION BOLTS. USE THE ORIGINAL FACTORY HARDWARE FOR THIS LOCATION.
- 4) ALIGN THE URETHANE MOUNT WITH THE TRANSMISSION AND CROSSMEMBER. TIGHTEN AND TORQUE BOLTS TO FACTORY SPECIFICATIONS.

URETHANE MOUNT DIAGRAM

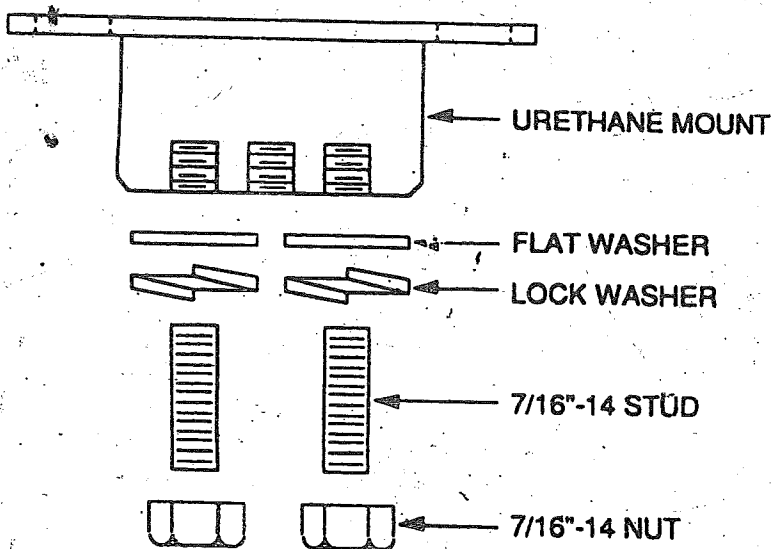

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY</u>
FORM 7-1604	INSTRUCTIONS	1
U-69018	URETHANE MOUNT	1
# STUD-34	7/16"-14 X 1 1/2" STUD	2
NUT-71	7/16"-14 NUT	2
WASH-51	7/16" LOCK WASHER	2
WASH-1147	7/16" FLAT WASHER	2