

grabars

grabarsusa.com

Front YJ and TJ GraBars Handle

Installation Instructions

Step 1:

Remove the (2) 8mm bolts (photo on right) in the inside upper-corner of the windshield frame, using a T40 Torx wrench.

Step 2:

Place the GraBar to align with the hole in the mounting bracket with the two holes in the rollbar mount. Reinstall the two factory bolts previously removed.

NOTE: Make sure you have the left handle for the left side, and the right-handle for the right side

Repeat steps 1 & 2 for the other side.

Congratulations on installing your new Solid Steel GraBars; we thank you and your family for partnering with Welcome Distributing! If you have any questions or need any additional help, don't ever hesitate to contact us!

If you have a late 2004 – 2006 TJ, See back side of instructions for Plastic Trim modifications!



YJ shown in photos

Please visit our website at www.WelcomeDistributing.com
"Like US" on Facebook at www.Facebook.com/Welcome.Distributing!

grabars

grabarsusa.com

TJ 2004-2006 GraBars



Installation Supplement

Step 1: Remove Plastic trim by removing one screw from each visor and 3 screws down each A Pillar.

Step 2: Drill 1-1/2" hole in plastic as shown in photo below.

Step 3: Slip the plastic trims over the handles and install left and right side GraBars as per instructions on front side.

Step 4: Reinstall the plastic trim and visor.

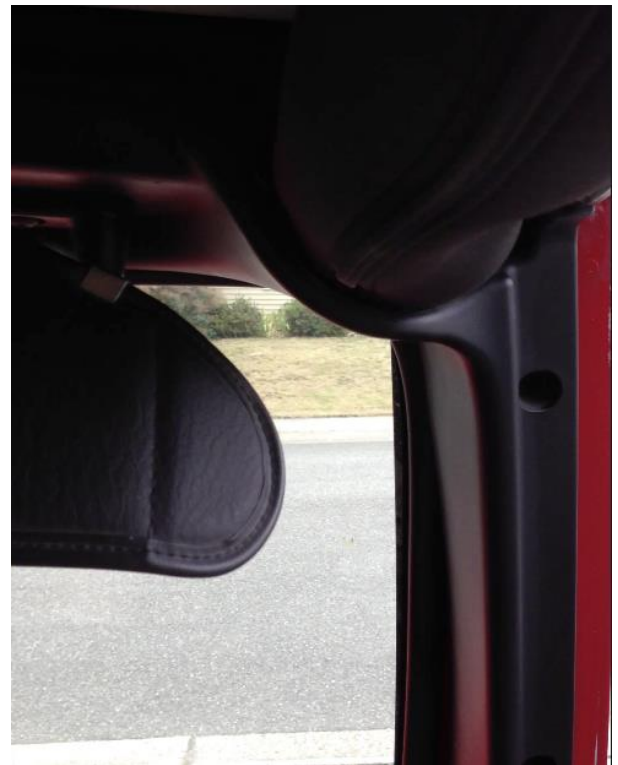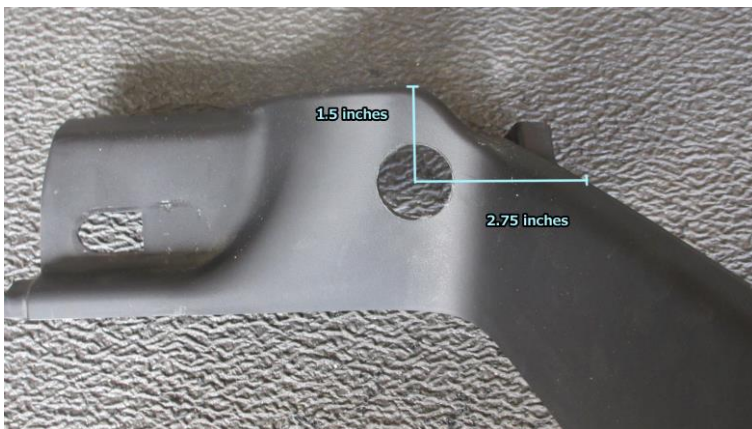

Please visit our website at www.WelcomeDistributing.com
"Like US" on Facebook at www.Facebook.com/Welcome.Distributing!