



Installation Instructions

JK Grab Handle Kit

Part number 779401

A. For headrest installation:

- 1) Remove head rest from seat per manufacturers instructions.
- 2) Slide posts through the eyelets in grab handle.
- 3) Re-install head rest on seat back. Fig 1.

B. For roll bar installation:

- 1) Remove the 2 screws above the rear seat recessed into the sound bar.
- 2) Use the included washers with the factory screws to install the grab handle. Fig 2.

C. Front windshield installation

- 1) Remove the bolt next to the visor mount on the inner top of the windshield, and fastener recessed on the side of the windshield shroud. Fig 3.
- 2) Use included flat washers with factory hardware to install grab handle.



Fig 1

Head Rest Installation

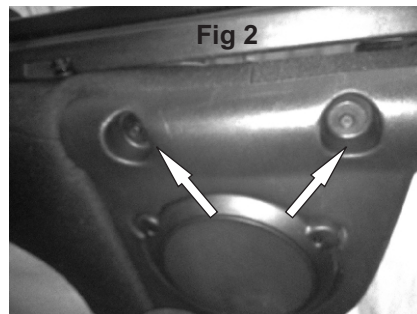


Fig 2

Roll Bar Installation



Fig 3

Front Windshield

Warranty Information

Rampage products, Inc. warrants to the original purchaser of any step product it manufactures, that the product will be free of defects in material or workmanship for a period of 90 days from date of purchase. Such obligations under this warranty shall be limited to the repair or replacement, at Rampage products discretion, of any assembly or parts which, upon examination by Rampage products, Inc. proves to be defective. All defective items must be returned with proof of purchase to Rampage products, Inc., freight prepaid. This warranty does not cover damage resulting from abuse, misuse, alteration, accident or damage in transit. Rampage products obligations under this warranty are limited to the aforementioned repair or replacement of warranty defects for which the return authorization has been received during the warranty period, and Rampage products, Inc. shall not be liable for any incidental or consequential damages arising from breach of this or any implied warranty.